



USER INSTRUCTIONS

3700 **Gemini Digital**

For full fitting, operating and
programming instructions please visit
www.loweandfletcherinc.com

Lowe & Fletcher Inc
650 Airport Place Norton Shores
MI-49441
T: +1 (616) 994 0490
F: +1 (616) 994 0480
E: sales@loweandfletcherinc.com
W: www.loweandfletcherinc.com

Public Mode

Turn Handle to Locked Position

Lock

ENTER USER CODE
(4 DIGITS)



CONFIRM CODE
(4 DIGITS)



TRY TURNING
HANDLE
ENSURE LOCKED

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN

LOCK
Automatic after 4
seconds



Error



Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.

Private Mode

Unlock Change User Code

#



OLD USER CODE



02



NEW USER CODE





NEW USER CODE



Emergency Key Override

INSERT MASTER KEY OVERRIDE & TURN 90°
EITHER CLOCKWISE OR ANTI-CLOCKWISE

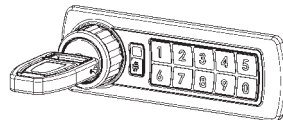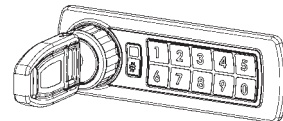

TURN KEY BACK 90° TO ORIGINAL
POSITION & REMOVE FROM LOCK