OPERATING AND PROGRAMMING INSTRUCTIONS

Keypad Digital Combination Lock Range: 3760



FUNCTION	Public	DDE PRIVATE	KEY SEQUENCE			NOTES
MASTER CODE FUNCTIONS						
STEP 1 STEP 2 STEP 3						
CHANGE MASTER CODE	1	1	[#] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS.
CHANGE USER CODE		1	[#] [Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS.
OPEN LOCK	/	1	[Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET PUBLIC MODE (FOUR DIGIT CODES)		1	[#] [Master Code]	08		DELETES ALL EXISTING USER CODES
SET PRIVATE MODE (FOUR DIGIT CODES)	1		[#] [Master Code]	09	[New User Code]	DELETES ALL EXISTING USER CODES
USER CODE FUNCTIONS						
CHANGE USER CODE		1	[#] [Old User Code]	02	[New User Code] [New User Code]	USER CODE IS FOUR DIGITS.
OPEN LOCK	1	1	[User Code]			
CLOSE LOCK	1		[User Code]		[User Code] [User Code]	
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS OR WHEN HANDLE CLOSED
FUNCTIONS AVAILABLE TO ALL CODES						
BATTERY CHECK	1	1	[#] [#]			REPLACE BATTERIES IF RED LIGHT SHOWS
NOTES						BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.						GREEN LIGHT - EXCELLENT
						AMBER LIGHT - GOOD
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.						RED LIGHT - LOW
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.						RED LIGHT – CHANGE BATTERIES AS SOON AS POSSIBLE
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.						WHEN BATTERIES ARE LOW RED LIGHT WILL FLASH DURING LOCK / UNLOCK
WHEN HANDLE IS TURNED TO LOCKED POSIT AMBER LIGHT FLASHES.						
MASTER CODE (8 digits) USER C						DE (4 DIGITS)
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT						

A Lowe & Fletcher Group Company