

# OPERATING AND PROGRAMMING INSTRUCTIONS

## 3790 Digital Combination Lock



FUNCTION	MODE		KEY SEQUENCE	NOTES		
	PUBLIC	PRIVATE				
MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)						
			STEP 1	STEP 2	STEP 3	
CHANGE MASTER CODE	✓	✓	[#] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS.
CHANGE USER CODE		✓	[#] [Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS.
DELETE USER CODE	✓		[Master Code]			OPENS LOCK AND DELETES USER CODE
SET / CHANGE SUB-MASTER CODE	✓	✓	[#] [Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS
DELETE SUB-MASTER CODE	✓	✓	[#] [Master Code]	07		DELETES SUB-MASTER CODE
SET PUBLIC MODE		✓	[#] [Master Code]	08		DELETES ALL EXISTING USER CODES
SET PRIVATE MODE	✓		[#] [Master Code]	09	[New User code]	DELETES ALL EXISTING USER CODES
OPEN LOCK	✓	✓	[Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET TECHNICIAN MODE	✓		[#] [Master Code]	10	[New Technician Code]	TECHNICIAN CODE IS SIX DIGITS
REMOVE TECHNICIAN MODE	✓		[#] [Master Code]	11		DELETES TECHNICIAN CODE
SET AUDIBLE BUTTONS ON	✓	✓	[#] [Master Code]	12		UNIT WILL BEEP ON EACH BUTTON PRESS
SET AUDIBLE BUTTONS OFF	✓	✓	[#] [Master Code]	13		UNIT WILL OPERATE SILENTLY
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[#] [Master Code]	16	[Time Code]	SEE NOTES ON TIMERS BELOW.
SET AUTO-TIMED UNLOCK OFF	✓		[#] [Master Code]	17		UNIT WILL NOT OPEN AUTOMATICALLY
SUB-MASTER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)						
CHANGE USER CODE		✓	[#] [Sub-Master Code]	02	[New User Code]	USER CODE IS FOUR OR SIX DIGITS. (FOUR DEFAULT)
CHANGE SUB MASTER CODE	✓	✓	[#] [Sub-Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS.
DELETE USER CODE	✓		[Sub-Master Code]			OPENS LOCK AND DELETES USER CODE
OPEN LOCK	✓	✓	[Sub-Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)						
CHANGE USER CODE		✓	[#] [Old User Code]	02	[New User Code] [New User Code]	USER CODE IS FOUR DIGITS.
OPEN LOCK	✓	✓	[User Code]			
CLOSE LOCK	✓		[User Code] [User Code]			USER CODE IS ENTERED TWICE FOR CONFIRMATION
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
TECHNICIAN CODE FUNCTIONS						
OPEN LOCK	✓		[Technician Code]			DOES NOT DELETE USER CODE
CLOSE LOCK	AUTO					RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
FUNCTIONS AVAILABLE TO ALL CODES						
BATTERY CHECK	✓	✓	[#] [#]			REPLACE BATTERIES IF RED LIGHT SHOWS
NOTES			TIMER FUNCTIONS		TIME CODE EXAMPLES	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.			TIME CODE	001	1 MIN	GREEN LIGHT - EXCELLENT
			TIME CODE	010	10 MINS	AMBER LIGHT - GOOD
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.			TIME CODE	030	1/2 HR	RED LIGHT - LOW
			TIME CODE	060	1 HR	
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.			TIME CODE	480	8 HRS	RED LIGHT –
			TIME CODE	720	12 HRS	CHANGE BATTERIES AS SOON AS POSSIBLE
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.			TIME CODE	999	16 HRS 39 MINS ( MAXIMUM )	
						FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE
TIME CODES ARE 3-DIGIT CODES CORRESPONDING TO THE NUMBER OF MINUTES.			ALL TIMES ARE APPROXIMATE +/- 10%			
MASTER CODE (8 digits)		SUB MASTER CODE (6 digits) (No Default)			USER CODE (4 DIGITS)	
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT						

□ □ □ □ □ □ □ □

□ □ □ □ □ □

□ □ □ □