

# OPERATING AND PROGRAMMING INSTRUCTIONS

## Nimbus Digital Combination Lock



FUNCTION	MODE		KEY SEQUENCE	NOTES		
	PUBLIC	PRIVATE				
<b>MASTER CODE FUNCTIONS</b>						
			<b>STEP 1</b>	<b>STEP 2</b>	<b>STEP 3</b>	
CHANGE MASTER CODE	✓	✓	[logo] [Old Master Code]	<b>01</b>	[New Master Code] [New Master Code]	MASTER CODE IS <b>EIGHT DIGITS</b>
CHANGE USER CODE		✓	[logo] [Master Code]	<b>02</b>	[New User Code]	USER CODE IS <b>FOUR DIGITS</b>
DELETE USER CODE	✓		[Master Code]			OPENS LOCK AND DELETES USER CODE
SET / CHANGE SUB-MASTER CODE	✓	✓	[logo] [Master Code]	<b>03</b>	[New Sub-Master Code]	SUB-MASTER CODE IS <b>SIX DIGITS</b>
DELETE SUB-MASTER CODE	✓	✓	[logo] [Master Code]	<b>07</b>		DELETES SUB-MASTER CODE
OPEN LOCK	✓	✓	[Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET <b>PUBLIC</b> MODE (FOUR DIGIT CODES)		✓	[logo] [Master Code]	<b>08</b>		DELETES ALL EXISTING USER CODES
SET <b>PRIVATE</b> MODE (FOUR DIGIT CODES)	✓		[logo] [Master Code]	<b>09</b>	[New User Code]	DELETES ALL EXISTING USER CODES
SET TECHNICIAN MODE	✓		[logo] [Master Code]	<b>10</b>	[New Technician Code]	TECHNICIAN CODE IS <b>SIX DIGITS</b>
REMOVE TECHNICIAN MODE	✓		[logo] [Master Code]	<b>11</b>		DELETES TECHNICIAN CODE
SET AUDIBLE BUTTONS ON	✓	✓	[logo] [Master Code]	<b>12</b>		UNIT WILL BEEP ON EACH BUTTON PRESS
SET AUDIBLE BUTTONS OFF	✓	✓	[logo] [Master Code]	<b>13</b>		UNIT WILL OPERATE SILENTLY
SET ALARM MODE ON & SET TIME		✓	[logo] [Master Code]	<b>14</b>	[Time Code]	SWITCHED VERSION ONLY. SEE NOTES ON TIMERS BELOW
SET ALARM MODE OFF		✓	[logo] [Master Code]	<b>15</b>		SWITCHED VERSION ONLY
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[logo] [Master Code]	<b>16</b>	[Time Code]	SEE NOTES ON TIMERS BELOW
SET AUTO-TIMED UNLOCK OFF	✓		[logo] [Master Code]	<b>17</b>		UNIT WILL NOT OPEN AUTOMATICALLY
SET COIN LOCK MODE ON	✓		[logo] [Master Code]	<b>18</b>		SWITCHED VERSION ONLY
SET COIN LOCK MODE OFF	✓		[logo] [Master Code]	<b>19</b>		SWITCHED VERSION ONLY
SET REMOTE ALLOCATION MODE	✓	✓	[logo] [Master Code]	<b>20</b>		CAN ONLY BE USED WITH ON-LINE SOFTWARE
RE-LOCK TIME		✓	[logo] [Master Code]	<b>23</b>	[Enter chosen time length]	1 = 8 SECONDS, 2 = 16 SECONDS, 3 = 32 SECONDS 4 = 40 SECONDS, 5 = 50 SECONDS, 6 = 60 SECONDS
SET LOCK OUT MODE	✓	✓	[logo] [Master Code]	<b>24</b>		IF USER GETS CODE WRONG 3 TIMES - 10 SECONDS TIME OUT
REMOVE LOCK OUT MODE	✓	✓	[logo] [Master Code]	<b>25</b>		REMOVAL OF LOCK OUT MODE
<b>SUB-MASTER CODE FUNCTIONS</b>						
CHANGE USER CODE		✓	[logo] [Sub-Master Code]	<b>02</b>	[New User Code]	USER CODE IS <b>FOUR OR SIX DIGITS</b> (FOUR DEFAULT)
CHANGE SUB MASTER CODE	✓	✓	[logo] [Sub-Master Code]	<b>03</b>	[New Sub-Master Code]	SUB-MASTER CODE IS <b>SIX DIGITS</b>
DELETE USER CODE	✓		[Sub-Master Code]			OPENS LOCK AND DELETES USER CODE
OPEN LOCK	✓	✓	[Sub-Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
<b>USER CODE FUNCTIONS</b>						
CHANGE USER CODE		✓	[logo] [Old User Code]	<b>02</b>	[New User Code] [New User Code]	USER CODE IS <b>FOUR DIGITS</b>
OPEN LOCK	✓	✓	[User Code]			
CLOSE LOCK	✓		[User Code] [User Code]			ENTER NEW USER CODE TWICE
CLOSE LOCK						RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
<b>TECHNICIAN CODE FUNCTIONS</b>						
OPEN LOCK	✓		[Technician Code]			DOES NOT DELETE USER CODE
CLOSE LOCK	AUTO					RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
<b>FUNCTIONS AVAILABLE TO ALL CODES</b>						
BATTERY CHECK	✓	✓	[logo] [logo]			REPLACE BATTERIES IF RED LIGHT SHOWS

NOTES	TIMER FUNCTIONS	TIME CODE EXAMPLES	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.	TIME CODE <b>001</b>	1 MIN	GREEN LIGHTS - EXCELLENT
	TIME CODE <b>010</b>	10 MINS	ORANGE LIGHTS - GOOD
	TIME CODE <b>030</b>	1/2 HR	RED LIGHTS - LOW
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.	TIME CODE <b>060</b>	1 HR	FLASHING RED LIGHTS - VERY LOW
	TIME CODE <b>480</b>	8 HRS	<b>RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE</b>
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.	TIME CODE <b>720</b>	12 HRS	
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.	TIME CODE <b>999</b>	16 HRS 39 MINS (MAXIMUM)	<b>FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE</b>
TIME CODES ARE 3-DIGIT CODES CORRESPONDING TO THE NUMBER OF MINUTES.	<b>ALL TIMES ARE APPROXIMATE +/- 10%</b>		

MASTER CODE (8 digits)	SUB MASTER CODE (6 digits) (No Default)	USER CODE (4 DIGITS)
<input type="text"/>	<input type="text"/>	<input type="text"/>

**ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT**