
## Emergency Key Override

Insert master key override & turn 90° to open

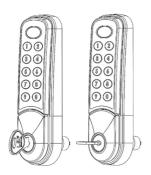

Turn key back 90° to original position and remove from lock

9226582 - 396- Public and Private User Instructions V1 August 2020



# USER INSTRUCTIONS PUBLIC & PRIVATE MODE

## Digital Combination Locks 396-

For full fitting, operating and programming instructions please visit www.lowe-and-fletcher.co.uk

Lowe & Fletcher Ltd Moorcroft Drive Wednesbury, West Midlands WS10 7DE, England

T: + 44 (0) 121 505 0400

F: + 44 (0) 121 505 0420

E: sales@lowe-and-fletcher.co.uk

W: www.lowe-and-fletcher.co.uk



## **Public Mode**

## **Private Mode**

#### To Lock

ENTER CODE (4 DIGITS)

()

CONFIRM CODE (4 DIGITS)

()

TRY TURNING HANDLE ENSURE LOCKED

#### To Unlock

USER OR MASTER CODE

()

TURN HANDLE TO OPEN



### To Unlock

USER OR MASTER CODE

()

TURN HANDLE TO OPEN



LOCK Automatic after 4 seconds

### Change User Code

LOGO KEY

()

OLD USER CODE

()

02

()

NEW USER CODE (4 DIGITS)



NEW USER CODE (4 DIGITS)

1234





Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.