



Example of RTC Start/Stop Mode (function 37)

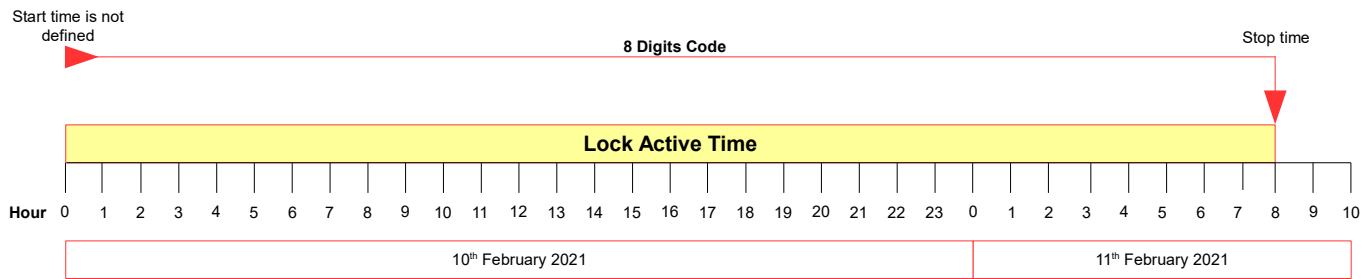

Example of RTC Stop Mode (function 36)

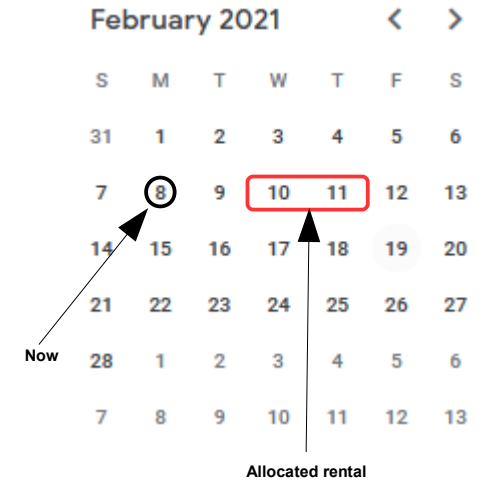