

SPECIAL NOTES

Before installing the Digital Combination Lock, load the batteries and familiarize yourself with the operation and programming.

Unless manufactured to special order, the lock is supplied in the "PRIVATE" operating mode.

In this mode, the user must enter a four-digit User Code to open it. The unit will re-lock itself after four seconds. The lock can be opened at any time using the Master Code.

Unless manufactured to special order:-

The default Master Code is 11 33 55 77 and the default User Code is 22 44.

These codes are common to all standard locks and it is very important that you set your own personal Master and User Codes.

Your lock is not secure until you have changed the default Master Code and User Code.

Keep a safe record of your Master Code as it is not possible to make any programming changes without it.

Please see programming guide to set your own codes.

INSTALLATION INSTRUCTIONS

3790 Digital Combination Lock

Lowe & Fletcher Inc.
650 Airport Place
Norton Shores
MI-49441

T: +001 616 994 0490
F: +001 616 994 0480
E: sales@loweandfletcherinc.com
W: www.loweandfletcherinc.com

L&F A Lowe & Fletcher Group Company

INSTALLATION INSTRUCTIONS

3790 Digital Combination Lock

REMOVE BATTERY PULL TAB BEFORE FITTING BATTERY COVER AND SCREW

The 3790 lock comprises an inner module and an outer module. The outer module is identified by its numbered keypad.

Step 1 Remove all packaging, including the protective tube on the rear of the outer module if fitted.

Step 2 Position the rear module inside the locker as shown in Picture 1.


Step 3 Position the front module on the outside of the locker as shown in Picture 2.

Step 4 Ensure that the electrical connectors are not bent and engage cleanly into the rear module.

Step 5 Screw the two fixing nuts onto the two fixing studs. Tighten to 2.5 Lb.Ft


Step 6 Before closing the door, test the lock by entering the user code on the keypad and lifting the locker release mechanism. When the lock is open, you should be able to lift the bolt freely.

Step 7 Your lock should be ready to use.

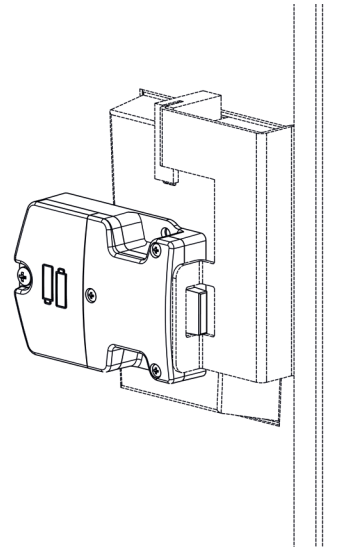

Picture 1

Position rear module with bolt in position shown

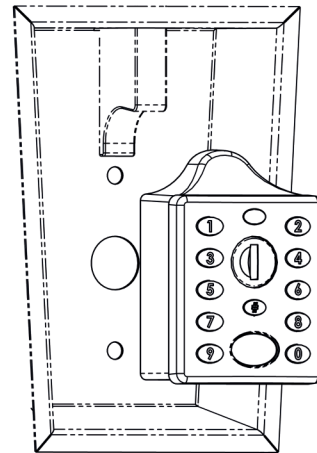

Picture 2

Insert front module through door panel and into rear module. Take care not to damage the contact pins.

Add two nuts to front module studs and tighten to 2.5Lb.Ft